

Service

INFORMATION

PAGE 1/1

SUBJECT PACBRAKE SOLENOID CLEANING


APPLICATION PART NO. C11829

DISASSEMBLY AND CLEANING PROCEDURES:

1. Remove the two screws marked A and the cover plate marked B.
2. Remove the spring marked C, the o-ring marked D and the spacer marked E.
3. Remove spool valve marked F (note which way the spool valve came out).
Clean the spool valve with varsol or mineral spirits to remove build-up of contaminants.
4. Wipe the spool dry with a soft lint-free cloth.

REASSEMBLY PROCEDURES:

1. Reinstall the spool valve carefully. Do not force the valve back in or the body could scratch or dent easily.
2. Install the spool valve with the thin tip facing out.
3. Reinstall the spacer, spring and o-ring.
4. Position the cover so the spring and the o-ring are seated properly and tighten the two remaining screws.

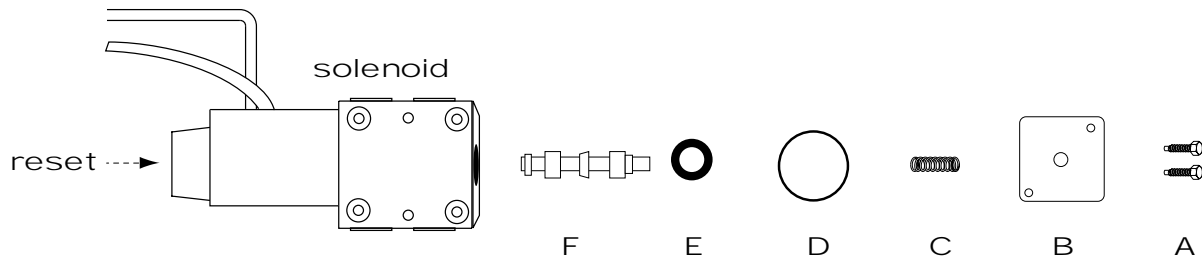

Pacbrake Service

PACBRAKE[®]
ENGINE BRAKES



"A Sign of Quality"

Phone: 800-663-0096 • Fax: 604-882-9278 • E-mail: info@pacbrake.com • Internet: www.pacbrake.com

Pacbrake is a registered trademark of Pacbrake Company. Other trademarks used herein are property of their respective holders. Printed in Canada

L5223.1100